


Bauform: **Stützringe (DST)**

Bauformtyp: **DST108**




Bauform: **Stützringe (DST)**

Bauformtyp: **DST109**

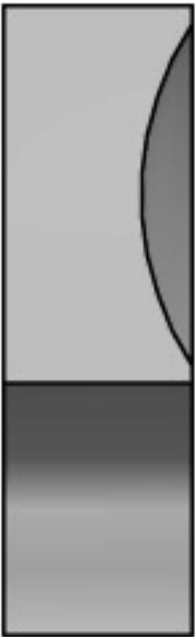


Bauform: **Stützringe (DST)**

Bauformtyp: **DST110**

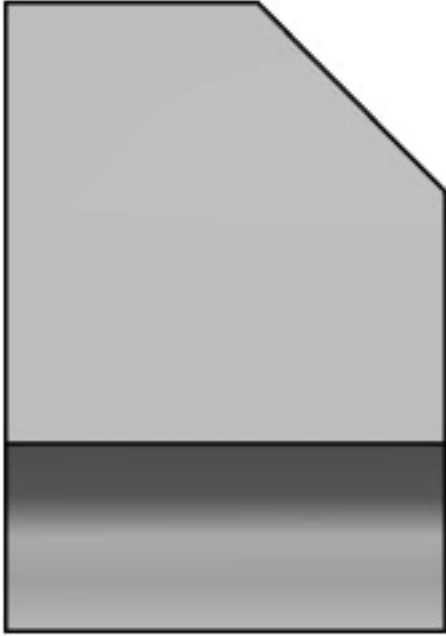


Bauform: **Stützringe (DST)**

Bauformtyp: **DST111**

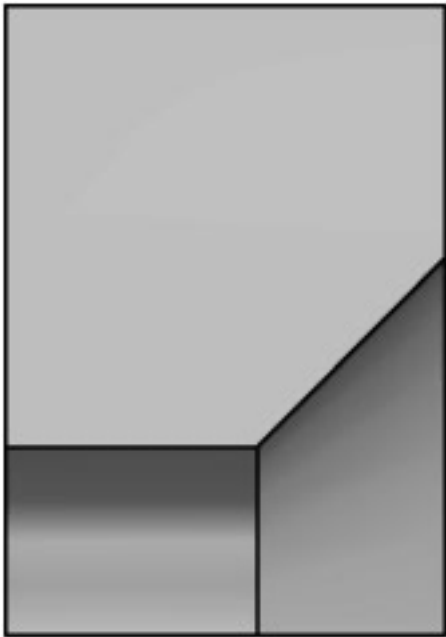

Bauform: **Stützringe (DST)**

Bauformtyp: **DST112**

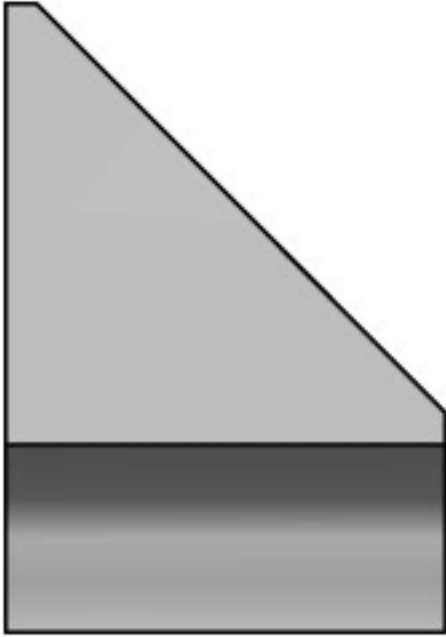

Bauform: **Stützringe (DST)**

Bauformtyp: **DST113**

